2. Exploded View and Parts List

2-1 Total

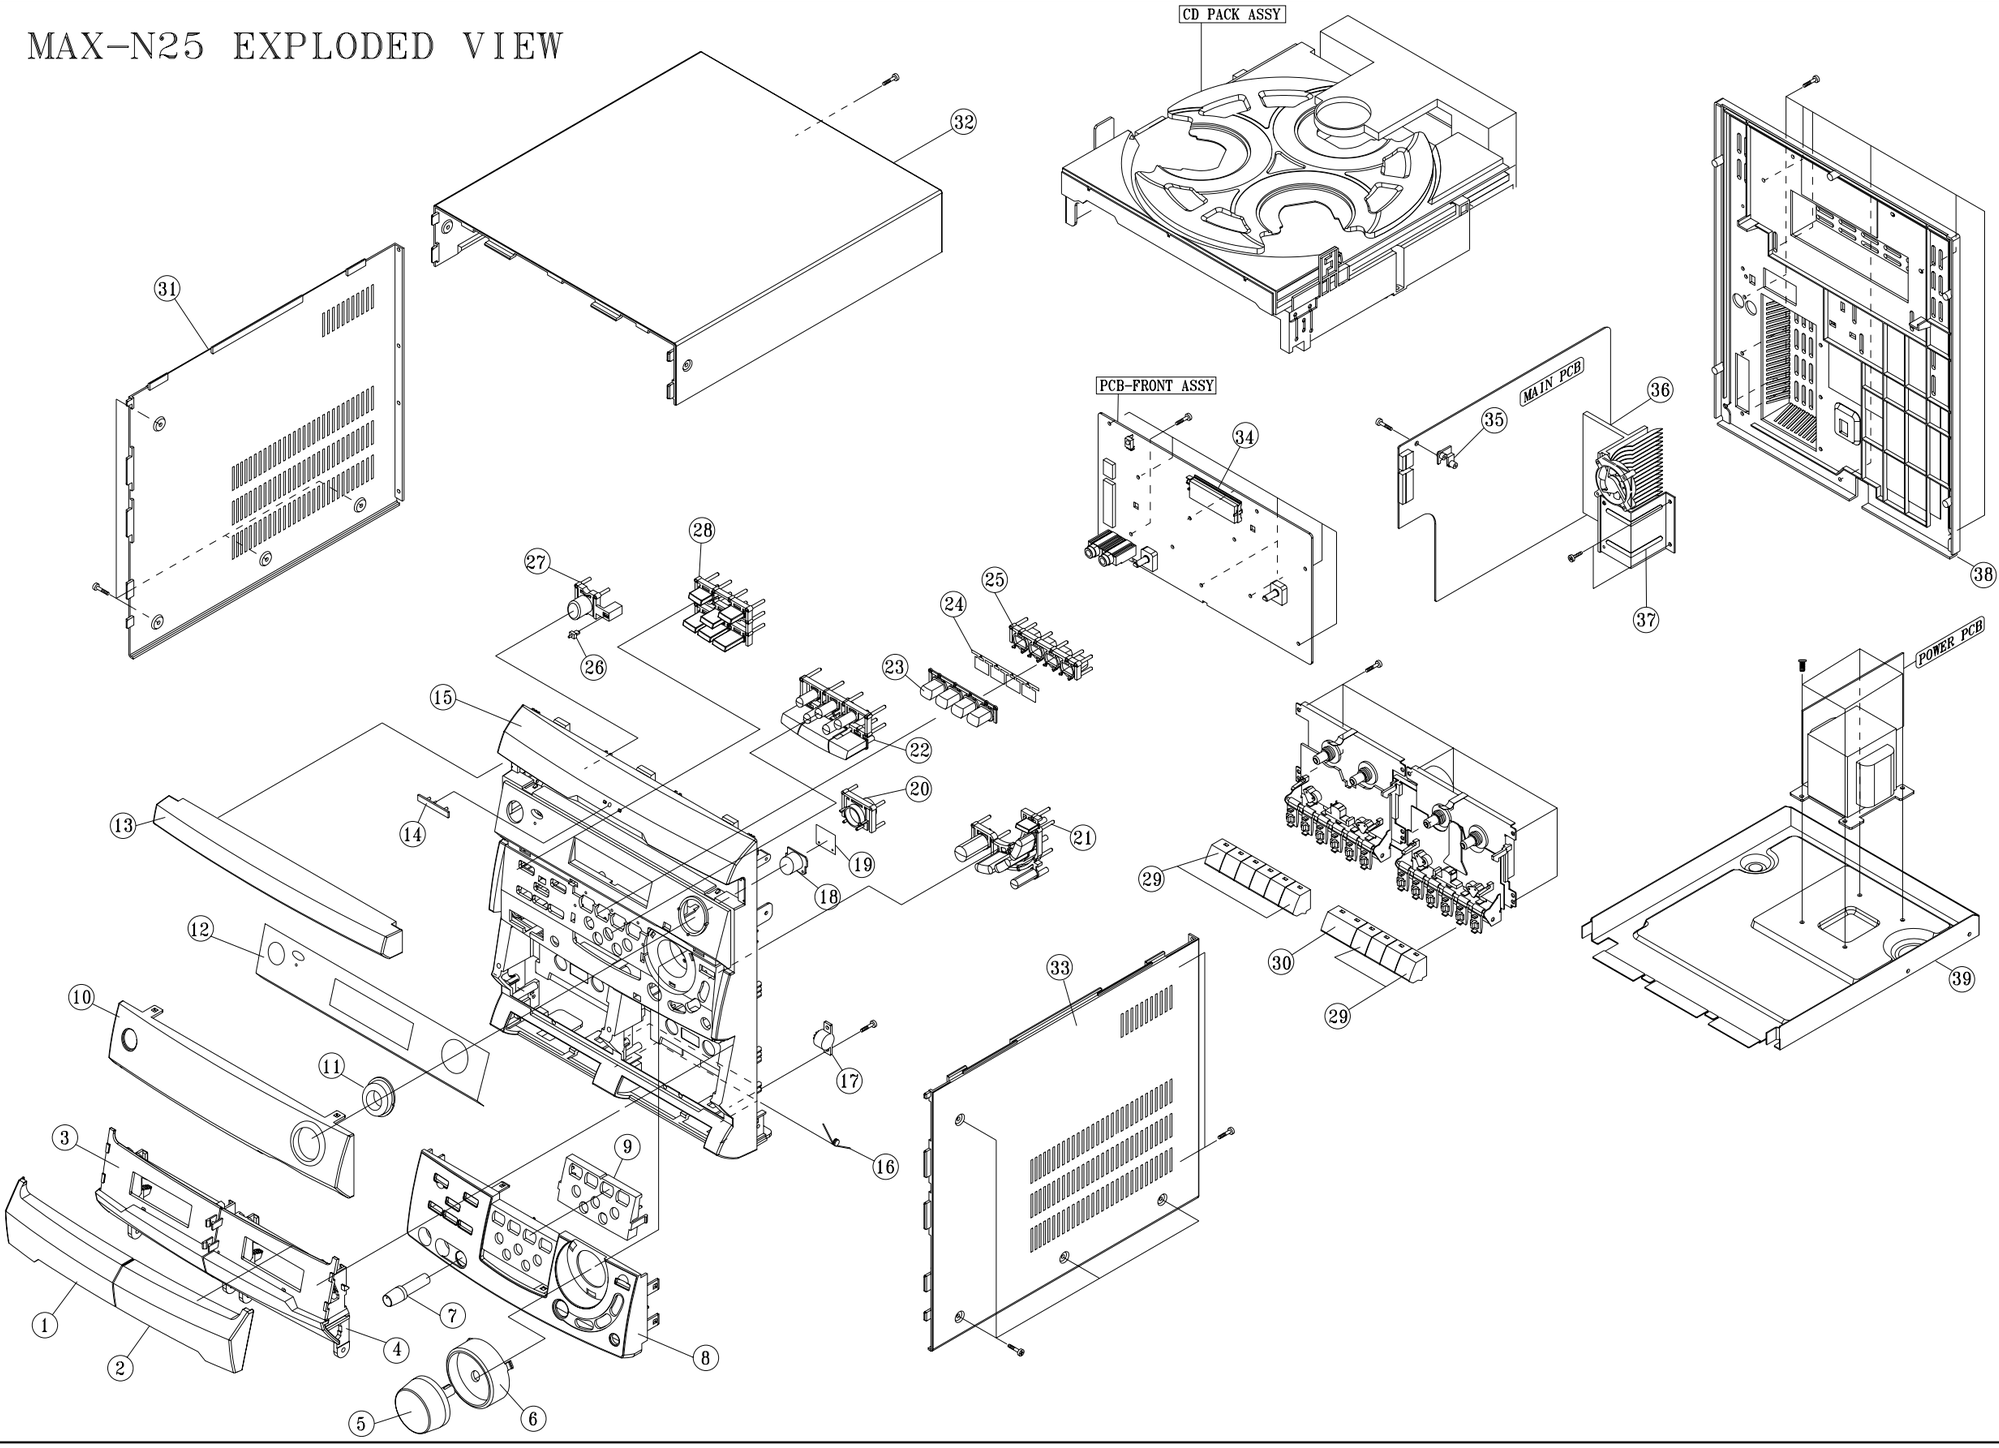

2-1-1 Parts List

No.	Code No.	Description	Specification	Q'TY	Remarks
1	AH64-00385A	WINDOW-CASS.L	PMMA SMOKE	1	
2	AH64-00386A	WINDOW-CASS.R	PMMA SMOKE	1	
3	AH64-00382B	DOOR-CASSETTE.L	ABS L/GRY	1	
4	AH64-00383B	DOOR-CASSETTE.R	ABS L/GRY	1	
5	AH64-00394B	KNOB-VOLUME	ABS M/GRY	1	
6	AH64-00388B	DECO-VOLUME	ABS L/GRY	1	
7	AH64-00442B	KNOB-MIC	ABS M/GRY	1	option
8	AH64-00387B	DECO-FRONT	ABS BLUE	1	
9	AH61-00282A	HOLDER-FRONT	PC/ABS WHT	1	
10	AH64-00384B	WINDOW-VFD	PMMA VIOLET	1	
11	AH64-00389B	DECO-SOUND	PMMA CLR	1	
12	AH63-00108A	FILTER-VFD	PC 0.3T BLK	1	
13	AH64-00397B	DOOR-CD	ABS L/GRY	1	
14	AH64-70003K	BADGE-BRAND	ABS+STAMPING	1	
15	AH64-00381B	CABINET-FRONT	MIPS L/GRY	1	
16	AH61-00013A	SPRING-EJECT	SUS P1.0	2	
17	AH61-80030A	DAMPER-ASSY	POM M0.8 G130	2	
18	AH67-00031B	LENS-SOUND	PMMA CLR	1	
19	AH63-00093A	FILTER-SOUND	PC 0.16T MILKY	1	
20	AH61-00254A	HOLDER-SOUND	PC/ABS WHT	1	
21	AH64-00393B	KNOB-OPEN	ABS L/GRY	1	
22	AH64-00392B	KNOB-CD	ABS M/GRY	1	
23	AH67-00032B	LENS-FUNCTION	PMMA CLR	1	
24	AH63-00092A	FILTER-FUNCTION	PC 0.16T MILKY	1	
25	AH61-00255A	HOLDER-FUNCTION	PC/ABS WHT	1	
26	AH67-00015A	LENS-POWER	PMMA MILKY	1	
27	AH64-00390A	KNOB-POWER	ABS D/GRY	1	
28	AH64-00391B	KNOB-DEMO	ABS L/GRY	1	
29	AH64-00395A	KNOB-CASS.S	ABS M/GRY	10	
30	AH64-00396A	KNOB-CASS.L	ABS M/GRY	1	option
31	AH64-30444A	CABINET-SIDE,L	MIPS L/GRAY	1	
32	AH64-30443A	CABINET-TOP	MIPS L/GRAY	1	
33	AH64-30445A	CABINET-SIDE,R	MIPS L/GRAY	1	
34	AH61-20539A	HOLDER-VFD	ABS BLK	1	
35	AH61-00021A	SUPPORT-PCB	ABS BLK	1	
36	AH62-32009A	HEAT-SINK,M	AL EXTRU	1	
37	AH61-10767A	BRKT-H/SINK	SECC 1.0T	1	
38	AH64-30446B	CABINET-REAR	MIPS L/GRAY	1	
39	AH64-30416A	CABINET-BOTTOM	SECC 1.0T	1	

2-2 Cassette Deck Exploded View and Parts List : (Auto Stop)

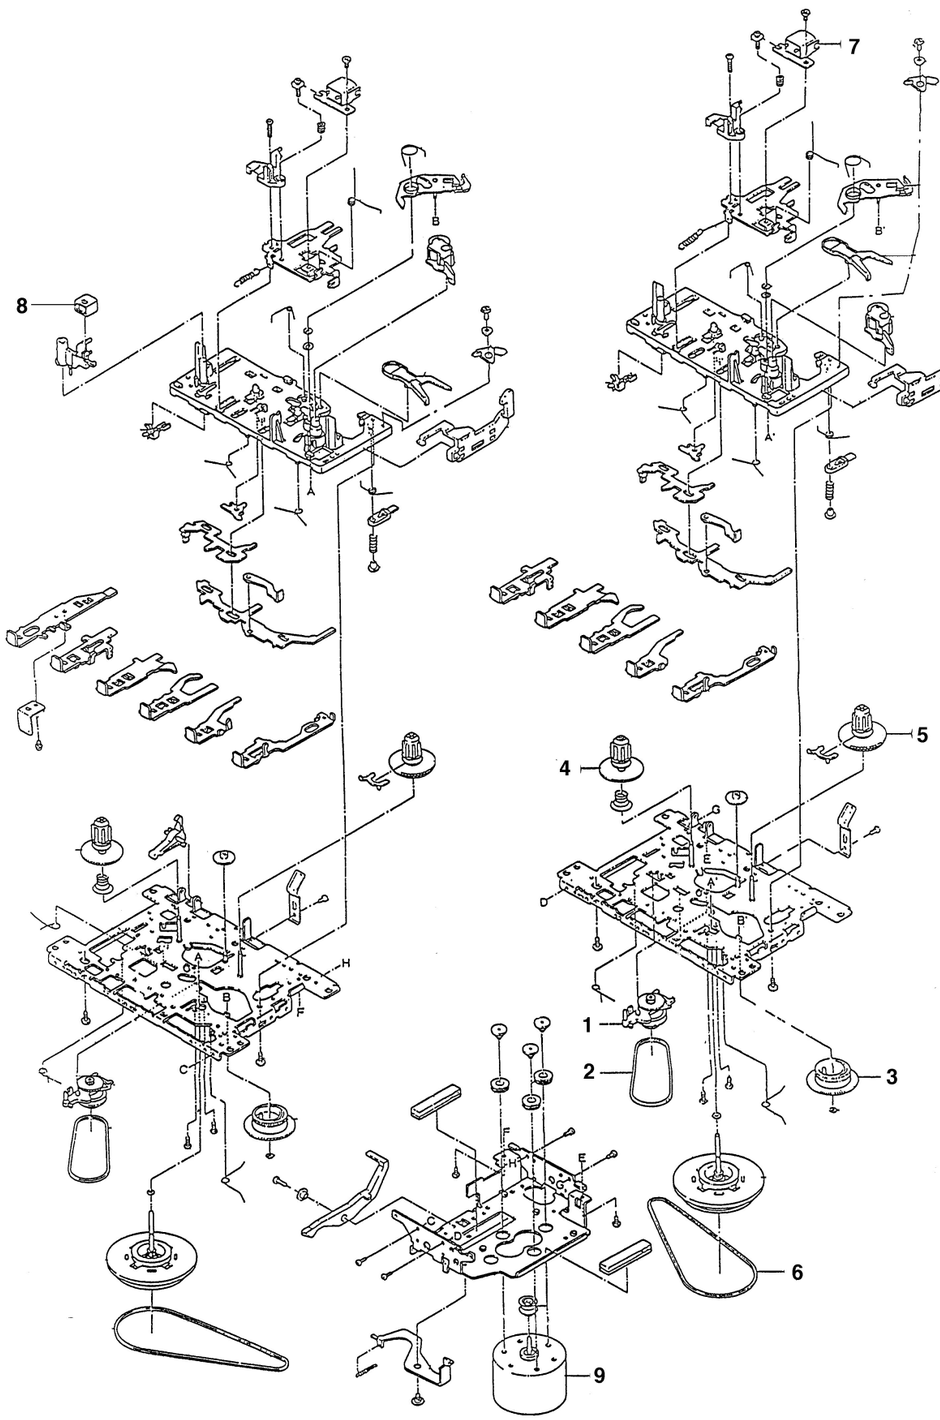

No.	Code No.	Description	Specification	Remarks
	AH59-20005X	DECK-CASSETTE	YN21ZSW-77	
1	AH81-11037D	R.F PULLEY ASS'Y	8521-200090-300	
2	AH81-11154D	BELT SUB	6600-090014-001	
3	AH81-11037H	CAM GEAR	6021-200802-001	
4	AH81-11037J	S REEL ASS'Y	8521-200080-300	
5	AH81-11037K	T REEL ASS'Y	8521-200070-300	
6	AH81-11154E	BELT MAIN	6600-090020-001	
7	AH81-11150W	R/P HEAD	TC-591	
8	AH81-11150X	ERASE HEAD	TC-230AN	
9	AH81-11037Q	MOTOR	EG530YD2BH	

2-3 CD Deck Exploded View and Parts list

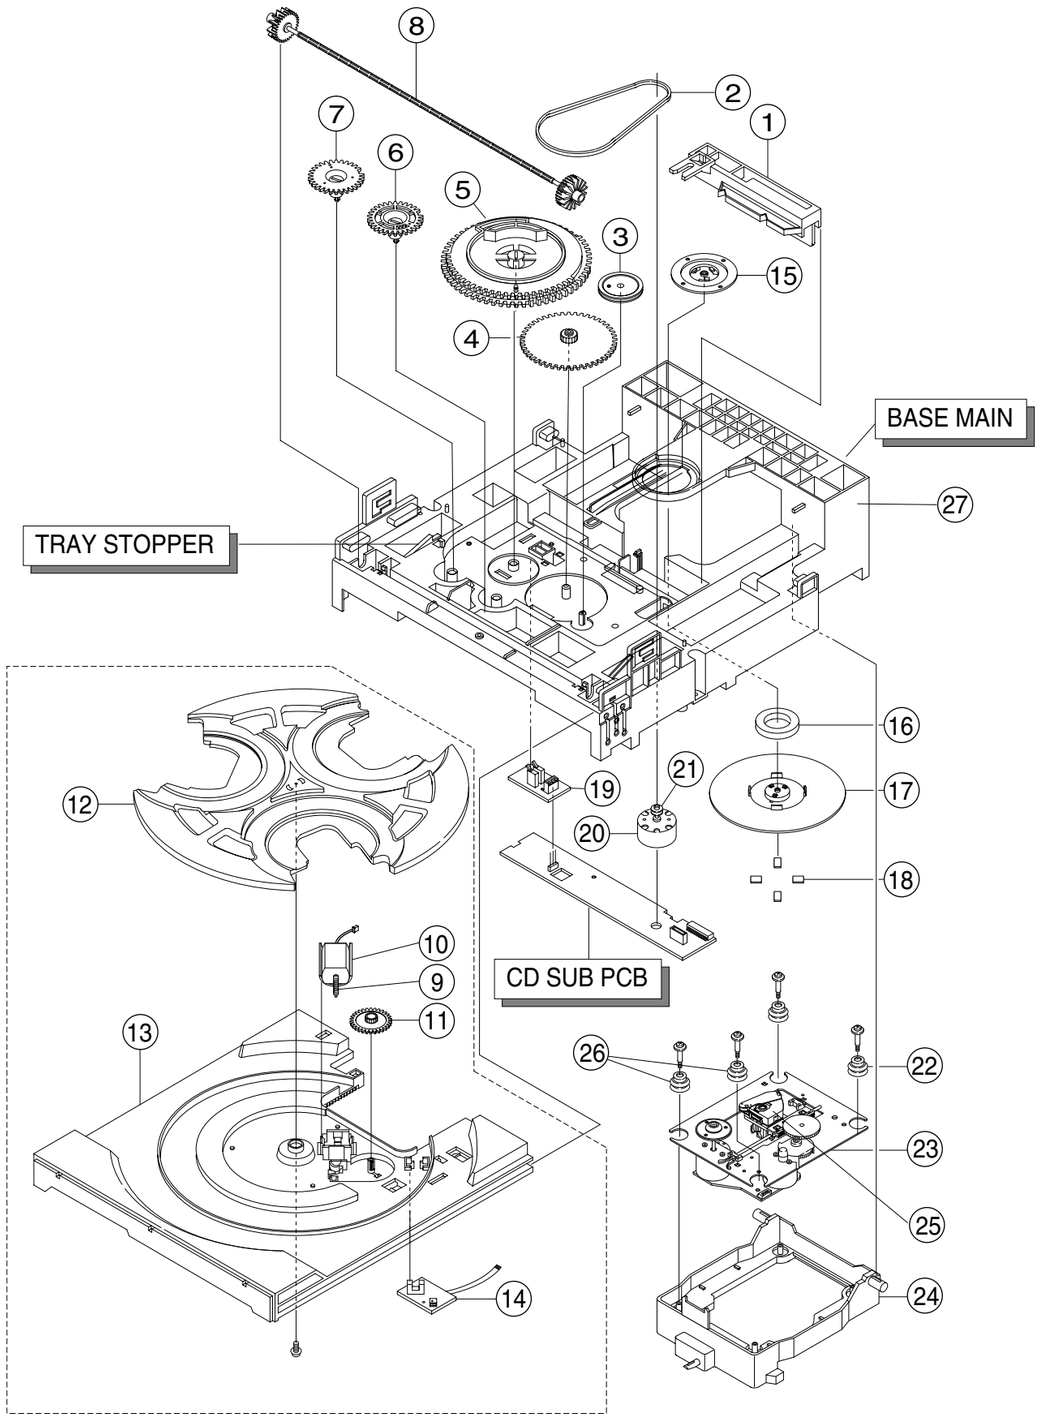

No.	Code No.	Description	Specification	Remarks
	AJ59-20150T	ASS'Y-DECK	CMS-300	
1	AH66-80022A	SLIDER-CAM	ABS HF-380 NTR	
2	AH66-60034A	BELT-LOAD	CR	
3	AH66-20186A	GEAR-PULLEY	POM (M90-44) WHT	
4	AH66-20187A	GEAR-LOAD	POM (M90-44) BLK	
5	AH66-20188A	GEAR-CAM	POM (M90-44) WHT	
6	AH66-20189A	GEAR-TRAY	POM (M90-44) BLK	
7	AH66-20190A	GEAR-CONVERT	POM (M90-44) WHT	
8	AH66-20191A	GEAR-SYNCRO	ABS HF-380 NTR	
9	AH66-20192A	GEAR-WORM	POM(M90-44),M0.5,PCD4.5	
10	AH31-12001A	MOTOR-LOADING	FF-030PN-09120	
11	AH66-20193A	GEAR-ROULLETE	POM(M90-44) BLK	
12	AH66-90056A	TRAY-ROULLETE	ABS XR-401 BLK	
13	AH66-90055A	TRAY-DISC	ABS BLK	
14	AH59-10099A	ASSY-PCB SENSOR	CMS-300,ASSY SENSOR	
15	AH61-00225A	BRKT-CHUCK	SECC T0.8,CMS-300	
16	3302-000159	MAGNET-CHUCK	AC,3500-3800G,2.6-3.2MGOe,30	
17	AH66-90057A	TABLE-CHUCK	,ABS,BLK,CMS-300	
18	AH69-20342B	SHEET-CHUCK	SHEET,HYMERON,BLK,0.4T	
19	AH59-10102A	ASSY-PCB SW	CMS-300,ASSY SW	
20	AH31-10021A	MOTOR-DC	RF-500TB,9VDC/130MA	
21	AH66-10008A	PULLEY-MOTOR	POM,BLK,CMS-CR3	
22	AH73-10031A	RUBBER-CD(R)	SI,CMS-300,40,RED	
23	AH91-60150A	CDP DECK ASSY	CMS-D50SG6,CMS-300D	
24	AH66-30098A	LEVER-LIFTER	ABS BLK CMS-300	
25	AH30-00003A	PICK-UP	SOH-AA,D51SG6(W/D/CO)	
26	AH73-10034A	RUBBER-CD(G)	SI,CMS-300,40,GREEN	
27	AH61-20428A	BASE-MAIN	ABS,BLK,CMS-300	

2-4 SPEAKER Exploded View and Parts list

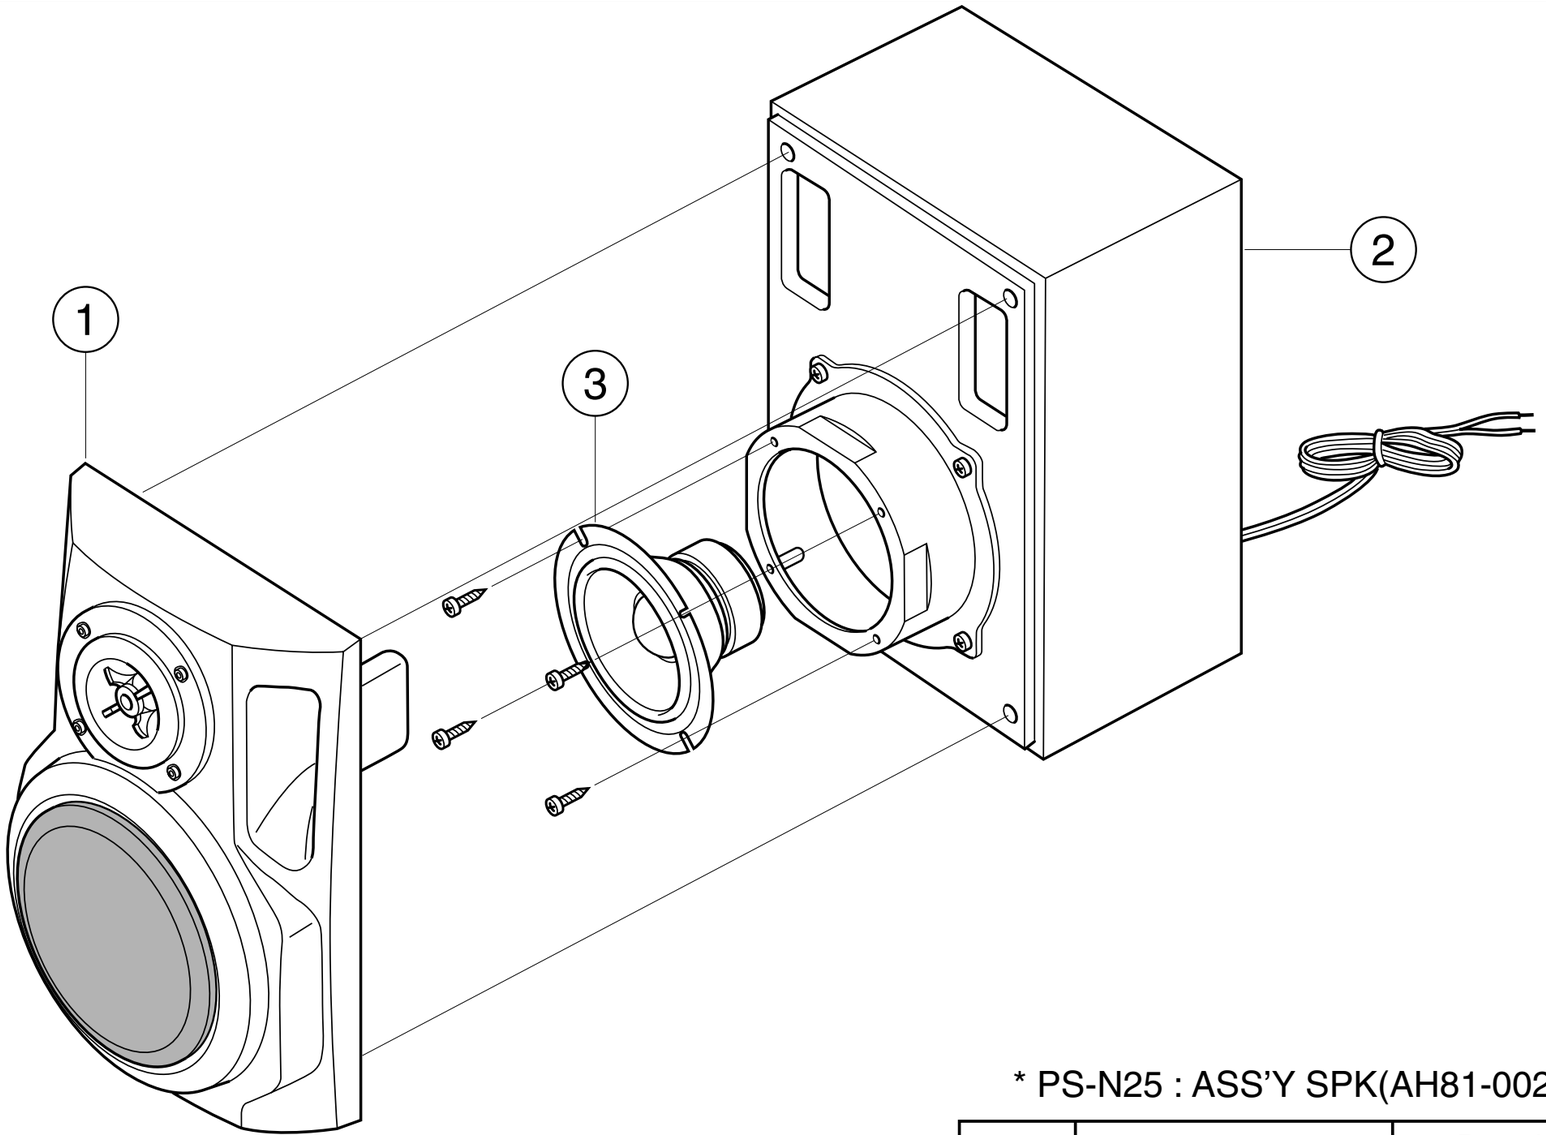

* PS-N25 : ASS'Y SPK(AH81-00242A)

No	Code No	Description
1	AH81-00242B	FRONT PANEL ASS'Y
2	AH81-00242C	CABINET ASS'Y
3	AH81-00242D	UNIT W/F 5 $^{1}/_{4}$"

* CAUSION : It is used the bonding, connet FRONT PANEL ASS'Y to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.